

Treadmill

1) What's in the box?

- a) Main part of the device - base with rungs.
- b) Side parts of the device.
- c) Middle part of the device.
- d) Parts to assemble the main part with the side parts:
 - i) 8x Screw M10x30
 - ii) 8x Nut M10
 - iii) 16x Plastic Cap M10
- e) Parts to assemble the side parts of the device with the middle part of the device:
 - i) 1x Screw M8x50
 - ii) 1x Nut M8
 - iii) 1x Plastic Cap M10
- f) Part for attaching the treadmill to a hard, ground-level surface:
 - i) 4x Expansion Bolt M14x100
 - ii) 4x Screw M10x100
 - iii) 4x Plastic Cap M10

2) What wrenches do you need to assemble the device?

- a) 2x Wrench Open-End M17
- b) 1x Wrench Hex Allen 5 mm
- c) 1x Wrench Open-End M13

3) What electrical tools do you need to assemble and install the device?

- a) You do not need electrical tools to assemble the device.
- b) To attach the assembled device to a solid foundation, you will need:
 - i) Hammer Drill
 - ii) Drill Bit M14x100

Additional sets

Extension set

1) What's in the package?

- a) 4x Extension 40 cm
- b) 8x Screw M10x30
- c) 4x Nut M10
- d) 4x Plastic Cap M10
- e) 16x Expansion Bolt M14x100
- f) 16x Screw M10x100

2) What wrenches do you need to assemble and install the extensions?

- a) 2x Wrench Open-End M17

3) What electrical tools do you need to connect the device to the extensions and install it on the foundation?

a) You do not need electrical tools to connect the device to the extensions.

b) To attach the assembled device to a solid foundation, you will need:

- i) Hammer Drill
- ii) Drill Bit M14x100

Wrench set for assembly

1) What's in the package?

- a) 2x Wrench Open-End M17
- b) 1x Wrench Hex Allen 5 mm
- c) 1x Wrench Open-End M13