

# **SCREW MAINTENANCE (EVERY 6 MONTHS)**

**1) Perform screw maintenance ONCE EVERY 6 MONTHS.**

**2) Necessary equipment:**

- a) Flat wrench size 13 (1 piece)
- b) Flat wrench size 17 (2 pieces)
- c) Flat wrench size 19 (2 pieces)
- d) Flat wrench size 24 (2 pieces)
- e) Flat screwdriver (1 piece)

**3) Maintenance description:**

- a) Using a screwdriver, we remove all plastic caps protecting the screws.
- b) Using the appropriate wrenches, we check the proper tightening of all screws and nuts.
- c) Ready - repeat after 6 months.